

<b>4-1. Maintenance and care .....</b>	<b>272</b>	Checking and replacing fuses.....	323
Cleaning and protecting the vehicle exterior.....	272	Headlight aim (vehicles with discharge headlights).....	335
Cleaning and protecting the vehicle interior.....	275	Light bulbs.....	336
 <b>4-2. Maintenance .....</b>	 <b>278</b>		
Maintenance requirements.....	278		
General maintenance .....	280		
Emission inspection and maintenance (I/M) programs .....	283		
 <b>4-3. Do-it-yourself maintenance .....</b>	 <b>284</b>		
Do-it-yourself service precautions .....	284		
Hood.....	287		
Positioning the jack.....	288		
Engine compartment.....	290		
Tires .....	304		
Tire inflation pressure.....	311		
Wheels.....	315		
Air conditioning filter .....	317		
Wireless remote control battery.....	319		
Rear seat entertainment system controller .....	321		